

* ENGINE SYSTEMS UNIFORM INSPECTION GUIDELINES *

Article Text

1993 Volkswagen EuroVan
For Volkswagen Technical Site
Copyright © 1998 Mitchell Repair Information Company, LLC
Saturday, March 18, 2000 10:06PM

ARTICLE BEGINNING

GENERAL INFORMATION

Engine Maintenance & Performance
Uniform Inspection Guidelines

All Makes & Models

Last Updated: December, 1994

MAP UNIFORM INSPECTION GENERAL GUIDELINES

OVERVIEW OF MOTORIST ASSURANCE PROGRAM

The Motorist Assurance Program (MAP) is the consumer outreach effort of the Automotive Maintenance and Repair Association, Inc. (AMRA). Participation in the Motorist Assurance Program is drawn from retailers, suppliers, independent repair facilities, vehicle manufacturers and industry associations.

The Motorist Assurance Program was established as an industry-wide effort to address concerns raised by regulators, the media and consumers questioning our ethics and methods of doing business. The automotive repair industry had been bombarded by months of negative stories in the media and scrutiny from state and federal regulators who focused on how the need for repairs is determined. MAP was formed as an industry response to this issue.

Our mission is to strengthen the relationship between the consumer and the auto repair industry. We produce materials that give motorists the information and encouragement to take responsibility for their vehicles - through proper, manufacturer-recommended, maintenance. We encourage participating service and repair shops (including franchisees and dealers) to adopt a Pledge to their Customers and the Motorist Assurance Program developed Standards of Service. All participating service providers have agreed to subscribe to this Pledge and to adhere to the promulgated Standards of Service which demonstrates to their customers that they are serious about customer satisfaction.

These Standards of Service require that an inspection of the vehicle's (problem) system be made according to industry guidelines. After learning that neither the car manufacturers nor any other source had complete guidelines, leading industry organizations, along with other industry participants banded together to address this challenging task. During the past two and a half years, they successfully developed industry inspection guidelines for the following systems: Exhaust, Brakes, ABS, Steering and Suspension, Engine Maintenance and Performance, HVAC, and Electrical systems. Guidelines for Drive Train and Transmission are currently being promulgated. Revisions to the inspection guidelines for Exhaust, Brakes/ABS and Steering and Suspension Systems, which were issued two years ago, are now being published for implementation beginning spring 1997. Participating shops utilize these Uniform Inspection Guidelines as part of the inspection process and for communicating their findings

*** ENGINE SYSTEMS UNIFORM INSPECTION GUIDELINES ***

Article Text (p. 2)

1993 Volkswagen EuroVan
For Volkswagen Technical Site
Copyright © 1998 Mitchell Repair Information Company, LLC
Saturday, March 18, 2000 10:06PM

to their customers.

The Motorist Assurance Program continues to work cooperatively and proactively with government agencies and consumer groups toward solutions that both benefit the customer and are mutually acceptable to both regulators and industry. We maintain the belief that industry must retain control over how we conduct our business, and we must be viewed as part of the solution and not part of the problem. Meetings with state and other government officials concerned with auto repair and/or consumer protection are conducted. Feedback from these representatives are brought back to members, and the program adjusted as needed.

To assure auto repair customers recourse if they were not satisfied with a repair transaction, the Motorist Assurance Program offers arbitration through MAP/BBB-CARE in cooperation with the Council of Better Business Bureaus and individual participating Bureaus. MAP "piloted" in Indianapolis and Pittsburgh during spring, 1996 - and publicized "roll-outs" in New Jersey, Detroit (MI), Chicago (IL) and Richmond (VA) were conducted. To put some "teeth" in the program, and accreditation requirement for shops was initiated. The requirements are stringent and a self-policing method has been incorporated which includes the "mystery shopping" of outlets. In addition, a committee of service providers had been working diligently developing standards for newspaper, television and Internet advertising.

We welcome you to join us as we continue our outreach ... with your support, both the automotive repair industry and your customers will reap the benefits. Please visit MAP at our Internet site: www.hunter.com/map.htm or contact us at:

808 17th Street, NW Suite 200
Washington, D.C. 20006
Ph. (202) 466-7050 Fax (202) 223-9569

OVERVIEW OF SERVICE REQUIREMENTS & SUGGESTIONS

It is MAP policy that all exhaust, brake, ABS, steering and suspension, wheel alignment, tires and wheels, driveline, engine performance and maintenance and heating, ventilation and air conditioning services be offered and performed under the guidelines and procedures specified in these sections.

Before any service is performed on a vehicle, an inspection of the appropriate system must be performed. The results of this inspection must be explained to the customer and documented on an inspection form. The condition of the vehicle and its components will indicate what services/part replacements may be required or suggested. In addition, suggestions may be made to satisfy the needs expressed by the customer.

This section lists the various parts and conditions that indicate required or suggested service or part replacement. Although this list is extensive, it is not inclusive. In addition to this list, a technician may make a suggestion. This suggestion must be based on substantial and informed experience or the vehicle manufacturer's

*** ENGINE SYSTEMS UNIFORM INSPECTION GUIDELINES ***

Article Text (p. 4)

1993 Volkswagen EuroVan
For Volkswagen Technical Site
Copyright © 1998 Mitchell Repair Information Company, LLC
Saturday, March 18, 2000 10:06PM

| Condition | 3 | Procedure |
|-----------------------|---|--|
| Contaminated | 3 | Require replacement of oil and filter. 3 See NOTE: (1) below. |
| High level | 3 | Determine source of incorrect level and suggest correction. |
| Low level | 3 | |
| Maintenance intervals | 3 | Suggest replacement to comply with vehicles OEM recommended service intervals. |

NOTE: (1) Determine source of contamination, i.e., engine coolant, fuel, metal particles, when changing oil.

ENGINE OIL FILTER/CANISTER

| Condition | 3 | Procedure |
|-----------------------|---|--|
| Contaminated | 3 | Require replacement of oil and filter. 3 See NOTE: (1) below. |
| Damaged | 3 | Suggest replacement. Further inspection required. See NOTE: (2) below. |
| Leaking | 3 | Require repair or replacement. |
| Maintenance intervals | 3 | Suggest replacement to comply with vehicles OEM recommended service intervals. |

NOTE: (1) Determine cause of contamination, i.e., engine coolant, fuel, metal particles, when changing oil.
(2) Determine cause, i.e., broken motor mount.

ENGINE GASKETS/SEALS

| Condition | 3 | Procedure |
|-----------|---|--|
| Leaking | 3 | Tighten or suggest replacement as necessary. |

ENGINE OIL DRAIN PLUG/GASKET

| Condition | 3 | Procedure |
|-----------------|---|--------------------------------|
| Leaking | 3 | Require repair or replacement. |
| Damaged threads | 3 | Require repair or replacement. |

NOTE: Some OEMs require replacement of drain plug gasket. Inspect

*** ENGINE SYSTEMS UNIFORM INSPECTION GUIDELINES ***

Article Text (p. 7)

1993 Volkswagen EuroVan

For Volkswagen Technical Site

Copyright © 1998 Mitchell Repair Information Company, LLC

Saturday, March 18, 2000 10:06PM

Leaking Ⓢ Suggest replacement.
 ~~~~~  
 Missing Ⓢ Require replacement  
 ~~~~~

INDICATOR LIGHTS & GUAGES (TEMPERATURE, BRAKE, ENGINE OIL, CHARGING)

~~~~~

Condition - Lights Ⓢ Procedure  
 ~~~~~

Light doesn't come on during bulb check Ⓢ
 ~~~~~

Fail to function properly during test Ⓢ Further inspection required.  
 mode Ⓢ See note.  
 ~~~~~

On constantly or intermittently Ⓢ
 ~~~~~

NOTE: See service manual for further information.

~~~~~

Condition - Guages Ⓢ Procedure
 ~~~~~

Inoperative Ⓢ Further inspection required.  
 ~~~~~

Indicating out of manufacturer's Ⓢ See note.
 recommended range Ⓢ
 ~~~~~

NOTE: See service manual for further information.

~~~~~

DIP STICKS/TUBES

~~~~~

Condition Ⓢ Procedure  
 ~~~~~

Missing Ⓢ Require replacement.
 ~~~~~

Incorrect application Ⓢ Require replacement.  
 ~~~~~

Modified Ⓢ Suggest replacement.
 ~~~~~

Broken/damaged Ⓢ Suggest replacement.  
 ~~~~~

Leaking Ⓢ Suggest repair or replacement.
 ~~~~~

COOLERS (TRANSMISSION) EXTERNAL; ENGINE OIL; POWER STEERING

~~~~~

Condition Ⓢ Procedure
 ~~~~~

Leaking Ⓢ Require repair or replacement.  
 ~~~~~

Damaged fins, tubes or fittings Ⓢ Suggest repair or replacement.
 ~~~~~

Internal restrictions Ⓢ Require repair or replacement.

**\* ENGINE SYSTEMS UNIFORM INSPECTION GUIDELINES \***

**Article Text (p. 8)**

1993 Volkswagen EuroVan

For Volkswagen Technical Site

Copyright © 1998 Mitchell Repair Information Company, LLC

Saturday, March 18, 2000 10:06PM

```
AAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAA
Missing/by-passed           3 Further inspection required.
AAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAA
Air flow restriction        3 Suggest repair.
AAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAA
Missing, damaged, deteriorated 3 Require repair or replacement of
  mounting hardware and bushings 3 hardware and/or bushings.
AAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAA
```

**ENGINE COOLING SYSTEM**

**RADIATOR & RADIATOR CAP**

```
AAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAA
Condition - Radiator        3 Procedure
AAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAA
Leaking                     3 Require repair or replacement.
AAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAA
Damaged fins, tubes or fittings 3 Suggest repair or replacement.
AAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAA
Internal restrictions        3 Require repair or replacement.
AAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAA
Air flow restriction        3 Suggest repair.
AAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAA
Missing, damaged, deteriorated 3 Require repair or replacement of
  mounting hardware and bushings 3 hardware and/or bushings.
AAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAA
Leaking internal trans cooler 3 Require repair or replacement.
AAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAA
Corroded                    3 Suggest repair or replacement.
AAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAA
Condition - Radiator Cap    3 Procedure
AAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAA
Missing                     3 Require replacement.
AAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAA
Fails to maintain proper pressure 3 Require replacement.
AAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAA
Damaged/bent or corroded    3 Suggest replacement.
AAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAA
Missing gaskets/seals       3 Require replacement.
AAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAA
Coolant recovery check valve inoperative 3 Require replacement.
AAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAA
Improper application        3 Require replacement.
AAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAA
```

**THERMOSTAT/HOUSING**

```
AAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAA
Condition                    3 Procedure
AAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAA
Improper installation        3 Require repair or replacement.
AAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAA
Missing/damaged/corroded thermostat 3 Require replacement of
```



**\* ENGINE SYSTEMS UNIFORM INSPECTION GUIDELINES \***

**Article Text (p. 9)**

1993 Volkswagen EuroVan  
For Volkswagen Technical Site  
Copyright © 1998 Mitchell Repair Information Company, LLC  
Saturday, March 18, 2000 10:06PM

3 thermostat

Improper application 3 Require replacement.  
Inoperative 3 Require replacement.  
Damaged/corroded housing 3 Suggest replacement of housing.

COOLANT HOSES/TUBES (RADIATOR, BY-PASS, HEATER, RECOVERY TANK)

Condition 3 Procedure  
Leaking 3 Require repair or replacement.  
Brittle, hard, cracked, corroded, 3 Suggest repair or replacement.  
spongy, soft, oil soaked, 3  
collapsed, swollen, non-automotive 3  
Improper routing 3 Suggest repair or replacement.  
Restricted 3 Suggest repair or replacement.  
Missing/damaged protective sleeves 3 Suggest replacement of sleeves.  
Maintenance intervals 3 Suggest replacement to comply  
3 with vehicle's OEM recommended  
3 service intervals.

CLAMPS

Condition 3 Procedure  
Missing/damaged 3 Require replacement.  
Loose 3 Require repair or replacement.  
Corroded 3 Suggest replacement.

NOTE: Be sure to inspect hoses for deterioration.

COOLANT RECOVERY TANK/CAP

Condition 3 Procedure  
Missing 3 Require replacement.  
Leaking 3 Require repair or replacement.  
Damaged 3 Suggest repair or replacement.

**\* ENGINE SYSTEMS UNIFORM INSPECTION GUIDELINES \***

**Article Text (p. 10)**

1993 Volkswagen EuroVan

For Volkswagen Technical Site

Copyright © 1998 Mitchell Repair Information Company, LLC

Saturday, March 18, 2000 10:06PM

Missing, damaged mounting hardware <sup>3</sup> Suggest repair or replacement of hardware.

**COOLANT**

| Condition             | Procedure                                                                     |
|-----------------------|-------------------------------------------------------------------------------|
| Contaminated          | <sup>3</sup> Require replacement. Further inspection required. See NOTE: (1). |
| Low level             | <sup>3</sup> Require filling to proper level. See NOTE: (2).                  |
| Improper mixture/type | <sup>3</sup> Require correction or replacement.                               |
| Improper acidity (pH) | <sup>3</sup> Suggest correction or replacement.                               |
| Maintenance intervals | <sup>3</sup> Suggest replacement. See NOTE: (3).                              |

- NOTE: (1) Determine source of contamination and suggest correction prior to coolant replacement.  
(2) Determine source of incorrect level and suggest repair.  
(3) The system should be drained and/or flushed and refilled with correct coolant according to OEM Recommended Service Interval and procedure.

**WATER PUMP**

| Condition                 | Procedure                                      |
|---------------------------|------------------------------------------------|
| Leaking, damaged          | <sup>3</sup> Require replacement.              |
| Noisy                     | <sup>3</sup> Suggest replacement.              |
| Inoperative               | <sup>3</sup> Require replacement.              |
| Broken, missing fasteners | <sup>3</sup> Require replacement of fasteners. |

**SHROUD/BAFFLES/DEFLECTORS**

| Condition                         | Procedure                                     |
|-----------------------------------|-----------------------------------------------|
| Missing/damaged                   | <sup>3</sup> Require replacement.             |
| Missing/damaged mounting hardware | <sup>3</sup> Require replacement of hardware. |

**RADIATOR FAN BLADE & FAN CLUTCH**











**\* ENGINE SYSTEMS UNIFORM INSPECTION GUIDELINES \***

**Article Text (p. 16)**

1993 Volkswagen EuroVan  
For Volkswagen Technical Site  
Copyright © 1998 Mitchell Repair Information Company, LLC  
Saturday, March 18, 2000 10:06PM

Condition - Control<sup>3</sup>

|                                                                                  |                                                                          |                                                   |
|----------------------------------------------------------------------------------|--------------------------------------------------------------------------|---------------------------------------------------|
| Solenoid                                                                         | <sup>3</sup>                                                             | Procedure                                         |
| AAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAA |                                                                          |                                                   |
| Inoperative                                                                      | <sup>3</sup>                                                             | Require repair or replacement. Further inspection |
|                                                                                  | <sup>3</sup>                                                             | required. See NOTE: below.                        |
| AAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAA |                                                                          |                                                   |
| Leaking                                                                          | <sup>3</sup>                                                             | Require repair or replacement.                    |
| AAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAA |                                                                          |                                                   |
| NOTE:                                                                            | Inoperative includes intermittent operation or out of OEM specification. |                                                   |
| AAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAA |                                                                          |                                                   |

IDLE AIR CONTROL (IAC)

|                                                                                  |                                                                                                                                                      |                                                   |
|----------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------|
| Condition                                                                        | <sup>3</sup>                                                                                                                                         | Procedure                                         |
| AAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAA |                                                                                                                                                      |                                                   |
| Missing                                                                          | <sup>3</sup>                                                                                                                                         | Require replacement.                              |
| AAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAA |                                                                                                                                                      |                                                   |
| Inoperative                                                                      | <sup>3</sup>                                                                                                                                         | Require repair or replacement. Further inspection |
|                                                                                  | <sup>3</sup>                                                                                                                                         | required. See NOTE: below.                        |
| AAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAA |                                                                                                                                                      |                                                   |
| Damaged                                                                          | <sup>3</sup>                                                                                                                                         | Suggest replacement.                              |
| AAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAA |                                                                                                                                                      |                                                   |
| Missing/damaged mounting hardware                                                | <sup>3</sup>                                                                                                                                         | Require repair or replacement of hardware.        |
|                                                                                  | <sup>3</sup>                                                                                                                                         |                                                   |
| AAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAA |                                                                                                                                                      |                                                   |
| NOTE:                                                                            | Inoperative includes intermittent operation or out of OEM specifications. Some components may be serviceable; check for accepted cleaning procedure. |                                                   |
| AAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAA |                                                                                                                                                      |                                                   |

CHARGE AIR COOLER "INTERCOOLER" (CAC)

|                                                                                  |              |                                  |
|----------------------------------------------------------------------------------|--------------|----------------------------------|
| Condition                                                                        | <sup>3</sup> | Procedure                        |
| AAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAA |              |                                  |
| Missing                                                                          | <sup>3</sup> | Require replacement.             |
| AAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAA |              |                                  |
| Leaking                                                                          | <sup>3</sup> | Require repair or replacement    |
| AAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAA |              |                                  |
| Damaged                                                                          | <sup>3</sup> | Suggest repair or replacement.   |
| AAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAA |              |                                  |
| Missing/damaged mounting hardware                                                | <sup>3</sup> | Require repair or replacement of |
|                                                                                  | <sup>3</sup> | hardware.                        |
| AAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAA |              |                                  |

INTAKE AIR TEMP SENSOR (IAT)

|                                                                                  |              |                                                   |
|----------------------------------------------------------------------------------|--------------|---------------------------------------------------|
| Condition                                                                        | <sup>3</sup> | Procedure                                         |
| AAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAA |              |                                                   |
| Missing                                                                          | <sup>3</sup> | Require replacement.                              |
| AAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAA |              |                                                   |
| Inoperative                                                                      | <sup>3</sup> | Require repair or replacement. Further inspection |



**\* ENGINE SYSTEMS UNIFORM INSPECTION GUIDELINES \***

**Article Text (p. 17)**

1993 Volkswagen EuroVan

For Volkswagen Technical Site

Copyright © 1998 Mitchell Repair Information Company, LLC

Saturday, March 18, 2000 10:06PM

³ required. See NOTE: below.

AAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAA

Damaged ³ Suggest replacement.

AAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAA

Missing/damaged ³ Require repair or replacement of hardware.  
mounting hardware ³

AAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAA

NOTE: Inoperative includes intermittent operation or out of OEM  
specifications. Some components may be serviceable; check for  
accepted cleaning procedure.

AAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAA

VOLUME AIR FLOW (VAF)

AAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAA

Condition ³ Procedure

AAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAA

Missing ³ Require replacement.

AAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAA

Inoperative ³ Require repair or replacement. Further inspection  
³ required. See NOTE: below.

AAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAA

Damaged ³ Suggest replacement.

AAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAA

Missing/damaged ³ Require repair or replacement of hardware.  
mounting hardware ³

AAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAA

NOTE: Inoperative includes intermittent operation or out of OEM  
specification.

AAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAA

MASS AIR FLOW (MAF)

AAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAA

Condition ³ Procedure

AAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAA

Missing ³ Require replacement.

AAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAA

Inoperative ³ Require repair or replacement. See NOTE: below.

AAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAA

Damaged ³ Suggest replacement.

AAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAA

Missing/damaged ³ Require repair or replacement of hardware.  
mounting hardware ³

AAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAA

NOTE: Inoperative includes intermittent operation or out of OEM  
specification.

AAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAA

AIR PLENUM/INTAKE MANIFOLD

AAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAA

Condition ³ Procedure

AAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAA

Leaking ³ Require repair or replacement.



**\* ENGINE SYSTEMS UNIFORM INSPECTION GUIDELINES \***

**Article Text (p. 19)**

1993 Volkswagen EuroVan

For Volkswagen Technical Site

Copyright © 1998 Mitchell Repair Information Company, LLC

Saturday, March 18, 2000 10:06PM

POWERTRAIN CONTROL MODULE (PCM)

| Condition   | Procedure                      |
|-------------|--------------------------------|
| Inoperative | Require repair or replacement. |
| Damaged     | Suggest repair or replacement. |

**SENSORS/ACTUATORS DEFINITIONS**

NOTE: The conditions and procedures apply to, but are not limited to the following list of components (SAE J1930 Terminology).

SENSORS/ACTUATORS DEFINITIONS

\*\*\*\*\*

| Sensor                                          | Abbreviation              |
|-------------------------------------------------|---------------------------|
| 02 Sensor                                       | 02S                       |
| Intake Air Temperature Sensor                   | IAT                       |
| Manifold Absolute Pressure Sensor               | MAP                       |
| Engine Coolant Temperature Sensor               | ECT                       |
| Barometric Pressure Sensor                      | BARO                      |
| Crankshaft Position Sensor                      | CKP                       |
| Throttle Position Sensor                        | TPS                       |
| Camshaft Position Sensor                        | CMP                       |
| Park Neutral Position                           | PNP                       |
| Clutch Pedal Position Switch                    | CPP                       |
| Wide Open Throttle Switch                       | WOT Switch                |
| Exhaust Gas Recirculation Valve Position Sensor | EGR Valve Position Sensor |
| Mass Air Flow Sensor                            | MAF                       |
| Volume Air Flow Sensor                          | VAF                       |
| Power Steering Pressure Sensor                  | PSP                       |
| Vehicle Speed Sensor                            | VSS                       |
| Fan Control Sensor                              | FS                        |
| Knock Sensor                                    | KS                        |
| Air Conditioning Cycling Switch                 | AC                        |
| Exhaust Gas Recirculating Temperature Sensor    | EGRT                      |
| Transmission Range Switch                       | TR Switch                 |

| Actuators                          | Abbreviation |
|------------------------------------|--------------|
| Idle Speed Control Actuator        | ISC          |
| Idle Air Control                   | IAC          |
| Exhaust Gas Recirculation Solenoid | EGR Solenoid |
| Vacuum Regulator Solenoid          | ...          |
| Mix Control Solenoid               | MC Solenoid  |
| Torque Converter Clutch            | TCC          |
| Fuel Injector                      | ...          |



**\* ENGINE SYSTEMS UNIFORM INSPECTION GUIDELINES \***

**Article Text (p. 21)**

1993 Volkswagen EuroVan

For Volkswagen Technical Site

Copyright © 1998 Mitchell Repair Information Company, LLC

Saturday, March 18, 2000 10:06PM

TUBES, HOSES, CLAMPS & GROMMETS

| Condition  | ⌘ | Procedure                      |
|------------|---|--------------------------------|
| Missing    | ⌘ | Require replacement.           |
| Damaged    | ⌘ | Require repair or replacement. |
| Leaking    | ⌘ | Require repair or replacement. |
| Restricted | ⌘ | Require repair or replacement. |

ORIFICE

| Condition             | ⌘ | Procedure                                                                          |
|-----------------------|---|------------------------------------------------------------------------------------|
| Missing               | ⌘ | Require replacement.                                                               |
| Restricted            | ⌘ | Require repair or replacement.                                                     |
| Maintenance intervals | ⌘ | Suggest replacement to comply with vehicle's<br>OEM recommended service intervals. |

OIL SEPARATOR/FILTER

| Condition             | ⌘ | Procedure                                                                          |
|-----------------------|---|------------------------------------------------------------------------------------|
| Missing               | ⌘ | Require replacement.                                                               |
| Restricted            | ⌘ | Require repair or replacement.                                                     |
| Damaged               | ⌘ | Suggest repair or replacement.                                                     |
| Maintenance intervals | ⌘ | Suggest replacement to comply with vehicle's<br>OEM recommended service intervals. |

IGNITION SYSTEM

BATTERY

| Condition                                      | ⌘ | Procedure |
|------------------------------------------------|---|-----------|
| Refer to Starting/Charging System information. |   |           |

BATTERY CABLES/WIRES/CONNECTORS (SEE NOTE:)

| Condition | ⌘ | Procedure |
|-----------|---|-----------|
|-----------|---|-----------|









**\* ENGINE SYSTEMS UNIFORM INSPECTION GUIDELINES \***

**Article Text (p. 25)**

1993 Volkswagen EuroVan

For Volkswagen Technical Site

Copyright © 1998 Mitchell Repair Information Company, LLC

Saturday, March 18, 2000 10:07PM

specifications.

AAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAA

IGNITION HARNESS (PRIMARY)

AAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAA

Condition 3 Procedure

AAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAA

Damaged 3 Suggest repair or replacement.

AAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAA

Mis-routed 3 Suggest repair.

AAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAA

Open fusible link 3 Require replacement.

AAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAA

Shorted/open 3 Require repair or replacement.

AAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAA

Connector terminal problem 3 Require repair or replacement.

(bent, broken, corroded or loose) 3

AAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAA

Excessive resistance 3 Require repair or replacement.

AAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAA

Poor ground 3 Require repair.

AAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAA

DISTRIBUTOR

AAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAA

Condition 3 Procedure

AAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAA

Bent shaft, worn bushings 3 Further inspection required. See NOTE:

and/or cam lobe 3 below.

AAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAA

Damaged 3 Suggest repair or replacement.

AAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAA

Missing, damaged mounting 3 Require repair or replacement of hardware.

hardware 3

AAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAA

Worn gear 3 Suggest replacement of gear.

AAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAA

Broken gear 3 Require replacement of gear.

AAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAA

Oil soaked 3 Further inspection required. See NOTE:

3 below.

AAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAA

NOTE: Refer to OEM recommended service procedures.

AAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAA

DISTRIBUTOR CAP

AAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAA

Condition 3 Procedure

AAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAA

Damaged 3 Suggest replacement.

AAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAA

Corroded/eroded terminals 3 Suggest replacement.



**\* ENGINE SYSTEMS UNIFORM INSPECTION GUIDELINES \***

**Article Text (p. 27)**

1993 Volkswagen EuroVan  
For Volkswagen Technical Site  
Copyright © 1998 Mitchell Repair Information Company, LLC  
Saturday, March 18, 2000 10:07PM

SPARK PLUGS (SEE NOTE: (1))

| Condition            | Procedure                                     |
|----------------------|-----------------------------------------------|
| Damaged              | Require replacement.                          |
| Shorted              | Require replacement.                          |
| Fouled               | Require repair or replacement. See NOTE: (2). |
| Maintenance interval | Suggest replacement. See NOTE: (3).           |
| Eroded electrode     | Suggest replacement.                          |
| Incorrect gap        | Require repair or replacement.                |

- NOTE: (1) It is not required to replace spark plugs in sets.  
However, you may suggest replacement of the other plugs for preventive maintenance.
- (2) Determine cause of fouling and suggest repair.
- (3) Suggest replacement to comply with vehicle's OEM recommended service intervals.

DISTRIBUTOR ADVANCE/RETARD (MECHANICAL/VACUUM)

| Condition            | Procedure                      |
|----------------------|--------------------------------|
| Damaged              | Suggest repair or replacement. |
| Inoperative          | Require repair or replacement. |
| Out of specification | Require repair or replacement. |

ELECTRONIC SPARK CONTROL MODULE

| Condition   | Procedure                                                                    |
|-------------|------------------------------------------------------------------------------|
| Damaged     | Suggest replacement.                                                         |
| Inoperative | Require repair or replacement. Further inspection required. See NOTE: below. |

NOTE: Inoperative includes intermittent operation, out of OEM specifications.

GAS CAP

| Condition | Procedure |
|-----------|-----------|
|-----------|-----------|



**\* ENGINE SYSTEMS UNIFORM INSPECTION GUIDELINES \***

**Article Text (p. 29)**

1993 Volkswagen EuroVan

For Volkswagen Technical Site

Copyright © 1998 Mitchell Repair Information Company, LLC

Saturday, March 18, 2000 10:07PM

FUEL PUMP (IN TANK/EXTERNAL - ELECTRICAL OR MECHANICAL)

| Condition                          | Procedure                                    |
|------------------------------------|----------------------------------------------|
| Inoperative                        | 3 Require repair or replacement.             |
| Noisy                              | 3 Suggest replacement.                       |
| Leaking                            | 3 Require repair or replacement.             |
| Damaged                            | 3 Suggest repair or replacement.             |
| Missing, damaged mounting hardware | 3 Requires repair or replacement of hardware |

ELECTRIC FUEL PUMP CONTROL CIRCUIT

| Condition                                     | Procedure |
|-----------------------------------------------|-----------|
| See Electrical Uniform Inspection Guidelines. |           |

LIQUID VAPOR SEPARATOR

| Condition   | Procedure                        |
|-------------|----------------------------------|
| Missing     | 3 Require replacement.           |
| Leaking     | 3 Require replacement.           |
| Damaged     | 3 Suggest repair or replacement. |
| Inoperative | 3 Require repair or replacement  |

ROLL-OVER VALVE

| Condition   | Procedure                        |
|-------------|----------------------------------|
| Missing     | 3 Require replacement.           |
| Damaged     | 3 Suggest repair or replacement. |
| Inoperative | 3 Require replacement.           |
| Leaking     | 3 Require replacement.           |

INERTIA FUEL SHUT OFF SWITCH

| Condition | Procedure |
|-----------|-----------|
|-----------|-----------|

**\* ENGINE SYSTEMS UNIFORM INSPECTION GUIDELINES \***

**Article Text (p. 30)**

1993 Volkswagen EuroVan  
For Volkswagen Technical Site  
Copyright © 1998 Mitchell Repair Information Company, LLC  
Saturday, March 18, 2000 10:07PM

| Condition   | 3 | Procedure                      |
|-------------|---|--------------------------------|
| Inoperative | 3 | Require repair or replacement. |
| Missing     | 3 | Require replacement.           |
| Damaged     | 3 | Suggest replacement.           |

FUEL LINES/CLAMPS/O-RINGS/CONNECTORS (SEE NOTE)

| Condition          | 3 | Procedure                      |
|--------------------|---|--------------------------------|
| Missing            | 3 | Require replacement.           |
| Leaking            | 3 | Require repair or replacement. |
| Restricted         | 3 | Require repair or replacement. |
| Routed incorrectly | 3 | Suggest repair.                |
| Damaged            | 3 | Suggest repair or replacement. |

NOTE: When replacing fuel lines/hoses, replace with products that meet(s) or exceed(s) OEM design specifications.

FUEL FILTER & IN-TANK FUEL STRAINER

| Condition - External Filter        | 3 | Procedure                                                            |
|------------------------------------|---|----------------------------------------------------------------------|
| Missing                            | 3 | Require replacement.                                                 |
| Restricted/contaminated            | 3 | Require replacement.                                                 |
| Leaking                            | 3 | Require repair or replacement.                                       |
| Damaged                            | 3 | Suggest replacement.                                                 |
| Maintenance interval               | 3 | Suggest replacement to comply with OEM recommended service interval. |
| Missing, damaged mounting hardware | 3 | Suggest repair. Further inspection required.                         |
| Condition - In-Tank                | 3 | Procedure                                                            |
| Missing                            | 3 | Require replacement.                                                 |
| Damaged                            | 3 | Require replacement.                                                 |
| Restricted                         | 3 | Require repair or replacement.                                       |







**\* ENGINE SYSTEMS UNIFORM INSPECTION GUIDELINES \***

**Article Text (p. 33)**

1993 Volkswagen EuroVan

For Volkswagen Technical Site

Copyright © 1998 Mitchell Repair Information Company, LLC

Saturday, March 18, 2000 10:07PM

⊃ hardware.

AAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAA

Leaking ⊃ Require repair or replacement.

AAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAA

Contaminated ⊃ Require repair or replacement. Further  
⊃ inspection required. See NOTE: below.

AAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAA

Improper mechanical operation ⊃ Require repair or replacement.

AAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAA

NOTE: Some components may be serviceable; check for accepted  
cleaning procedure.

AAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAA

EARLY FUEL EVAPORATION VALVE (HEAT RISER ASSEMBLY)

AAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAA

Condition ⊃ Procedure

AAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAA

Inoperative, binding ⊃ Require repair or replacement.

AAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAA

Leaking exhaust ⊃ Require repair or replacement.

AAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAA

Noisy ⊃ Suggest repair or replacement.

AAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAA

EARLY FUEL EVAPORATION, HEATER/GRID (EFE)

AAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAA

Condition ⊃ Procedure

AAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAA

Inoperative ⊃ Require repair or replacement.

AAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAA

Restricted ⊃ Require repair or replacement.

AAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAA

Damaged ⊃ Suggest repair or replacement.

AAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAA

EXHAUST GAS RECIRCULATION SYSTEM (EGR)

EGR VALVE

AAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAA

Condition ⊃ Procedure

AAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAA

Missing ⊃ Require replacement.

AAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAA

Inoperative ⊃ Require repair or replacement.

AAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAA

Leaking ⊃ Require repair or replacement.

AAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAA

Restricted passage ⊃ Require repair or replacement.

AAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAA

Damaged ⊃ Suggest repair or replacement.

AAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAA

Maintenance interval ⊃ Suggest repair or replacement to comply with







**\* ENGINE SYSTEMS UNIFORM INSPECTION GUIDELINES \***

**Article Text (p. 37)**

1993 Volkswagen EuroVan

For Volkswagen Technical Site

Copyright © 1998 Mitchell Repair Information Company, LLC

Saturday, March 18, 2000 10:07PM

| Condition  | 3 | Procedure                      |
|------------|---|--------------------------------|
| Missing    | 3 | Require replacement.           |
| Damaged    | 3 | Suggest replacement.           |
| Leaking    | 3 | Require repair or replacement. |
| Restricted | 3 | Require repair or replacement. |

EVAPORATIVE EMISSION CANISTER PURGE VALVE (ELECTRICAL/VACUUM)

| Condition   | 3 | Procedure            |
|-------------|---|----------------------|
| Missing     | 3 | Require replacement. |
| Damaged     | 3 | Suggest replacement. |
| Inoperative | 3 | Require replacement. |
| Leaking     | 3 | Require replacement. |

GAS CAP

| Condition | 3 | Procedure            |
|-----------|---|----------------------|
| Missing   | 3 | Require replacement. |
| Leaking   | 3 | Require replacement. |
| Damaged   | 3 | Suggest replacement. |

LIQUID/VAPOR SEPARATOR

| Condition   | 3 | Procedure                      |
|-------------|---|--------------------------------|
| Missing     | 3 | Require replacement.           |
| Leaking     | 3 | Require replacement.           |
| Damaged     | 3 | Suggest repair or replacement. |
| Inoperative | 3 | Require repair or replacement. |

ROLL OVER VALVE

| Condition | 3 | Procedure |
|-----------|---|-----------|
|-----------|---|-----------|

