


## Auxiliary heater D2L\*, with programmable timer,

from August 1992

### Relay location

For relay location and multiple connectors location see also section "component locations".

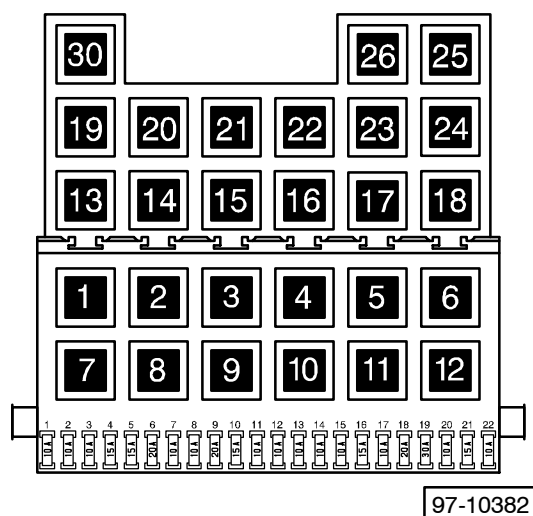


### Fuse colors

30A – green  
25A – white  
20A – yellow  
15A – blue  
10A – red

\* – Type 25172501, see identification plate


30	30
15	15
X	X
31	31

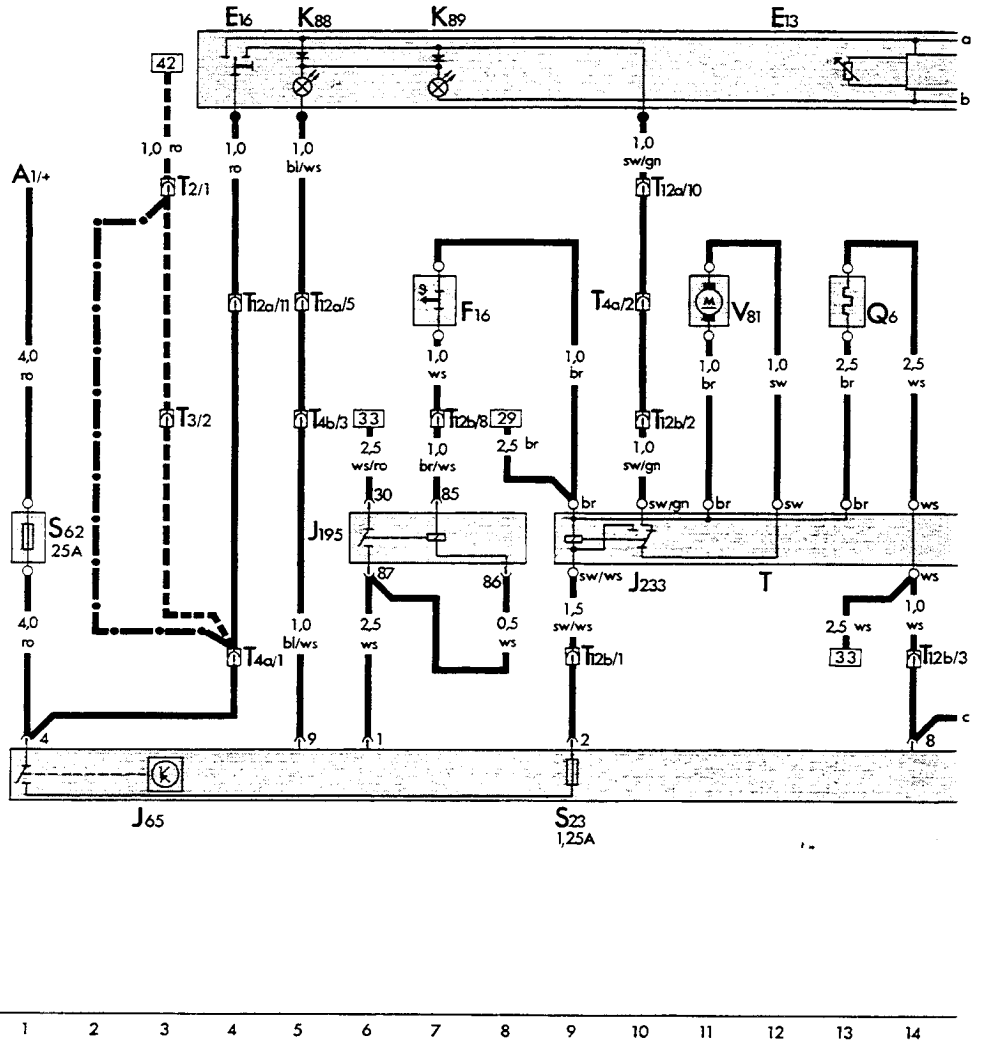

- ws = white
- sw = black
- ro = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = violet
- ge = yellow

- |   |  |
|---|--|
| <p>A1 – Auxiliary Battery</p> <p>E13 – Heater-Time Temperature Control Switch, on left B-pillar, upper part</p> <p>E16 – Heater/Heat Output Switch</p> <p>F16 – Heater Flame Sensor</p> <p>J65 – Heater Control Module, below driver's seat*</p> <p>J195 – Glow Plug Control Relay, below driver's seat*</p> <p>J233 – Auxiliary Heater Blower Relay</p> <p>K88 – Water Heater Malfunction Light (red)</p> <p>K89 – Water Heater On Light (green)</p> <p>Q6 – Engine Glow Plug</p> <p>S23 – Heater Fuse</p> <p>S62 – Auxiliary Heater Fuse, below driver's seat**</p> <p>T – Junction Box (printed circuit board)</p> | <p>T2 – Double Connector, below driver's seat*</p> <p>T3 – 3-Pin Connector, below driver's seat*</p> <p>T4a – 4-Pin Connector, below driver's seat*</p> <p>T4b – 4-Pin Connector, below driver's seat*</p> <p>T12a – 12-Pin Connector, behind left B-pillar trim, upper part</p> <p>T12b – 12-Pin Connector, below driver's seat*</p> <p>V81 – Fresh Air/Heater Blower</p> <p>* – Located behind lower part of left B-pillar trim on vehicles with swivel seat</p> <p>** – Located on lower part of left B-pillar on vehicles with swivel seat</p> <p>—●—●— – "Camper" only</p> <p>—■—■— – Not on "Camper"</p> |
|---|--|

97-10041

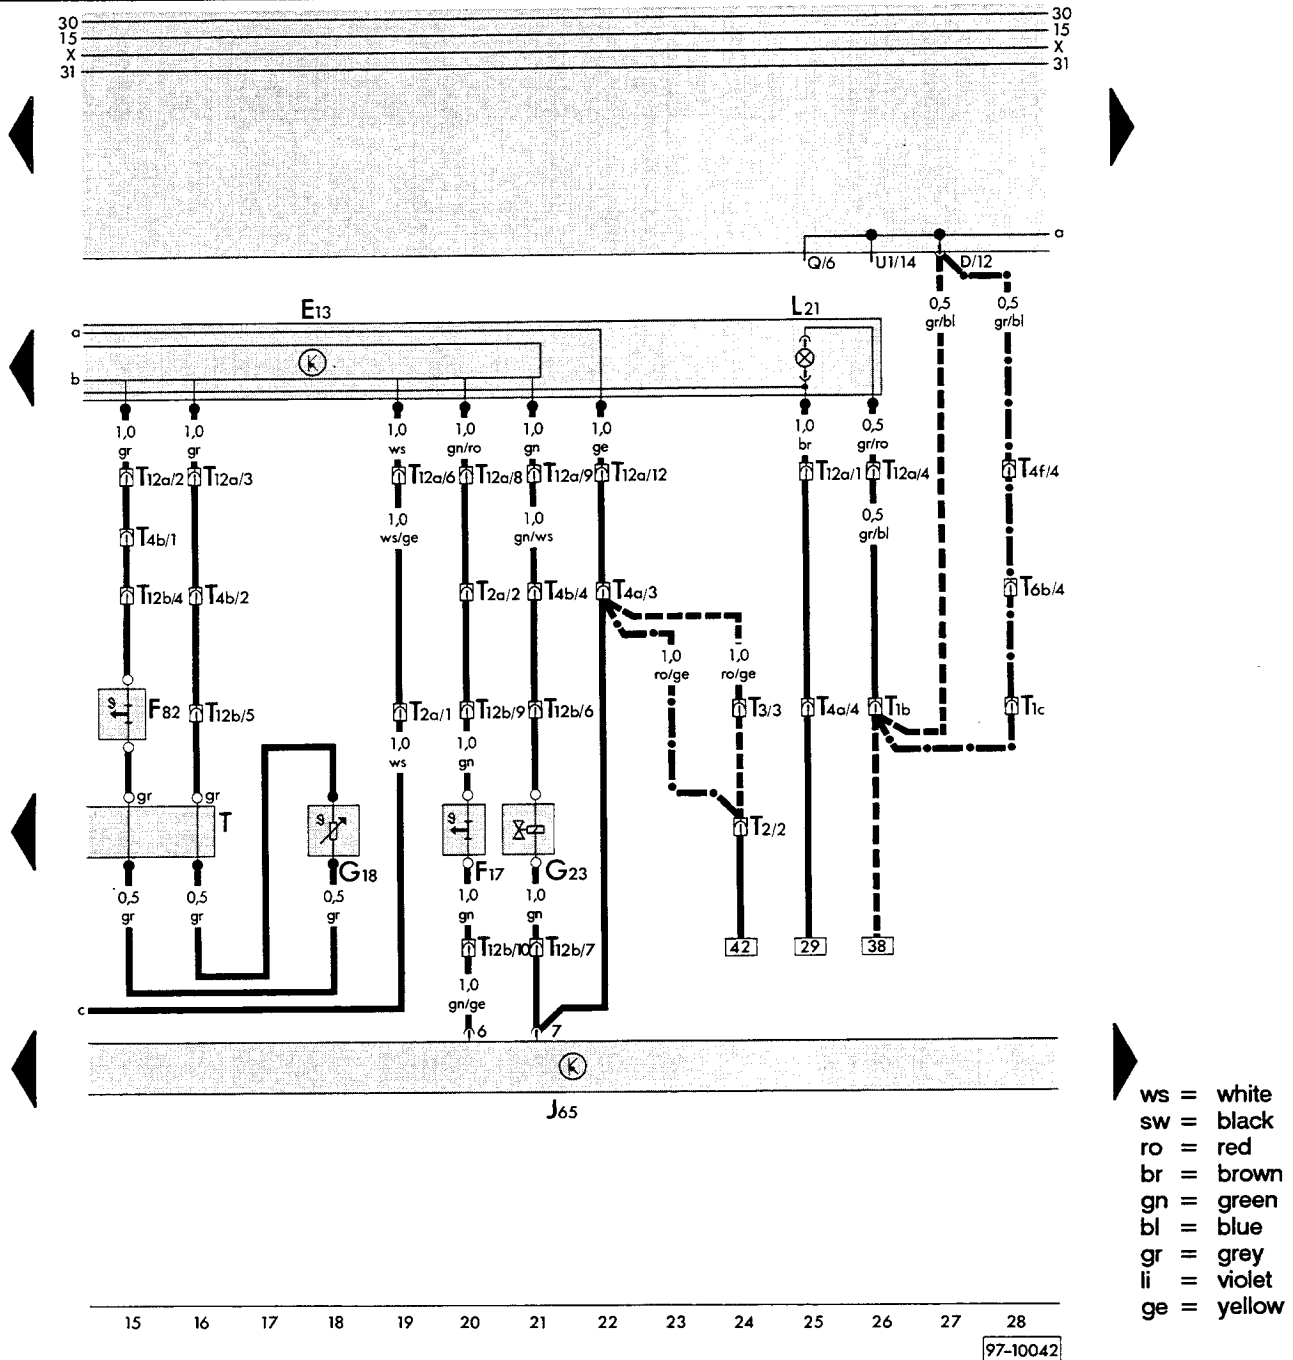

E13 – Heater-Time Temperature Control Switch, on left B-pillar, upper part

E20 – Instrument Panel Light Dimmer Switch

F17 – Heater Overheat Control Switch

F 82 – Temperature Limiting Switch

G18 – Temperature Sensor

G23 – Transfer Fuel Pump (FP)

J65 – Heater Control Module, below driver's seat\*

L21 – Heater Control Lever Light

T – Junction Box (printed circuit board)

T1b – Single Connector, below driver's seat\*

T1c – Single Connector, on B-pillar, left

T2 – Double Connector, below driver's seat\*

T2a – Double Connector, below driver's seat\*

T3 – 3-Pin Connector, below driver's seat\*

T4a – 4-Pin Connector, below driver's seat\*

T4b – 4-Pin Connector, below driver's seat\*

T4f – 4-Pin Connector, behind fuse/relay panel

T6b – 6-Pin Connector, on left A-pillar, upper part


T12a – 12-Pin Connector, behind left B-pillar trim, upper part

T12b – 12-Pin Connector, below driver's seat\*

\* – Located behind lower part of B-pillar trim on vehicles with swivel seat

--- – "Camper" only

— — – Not on "Camper"

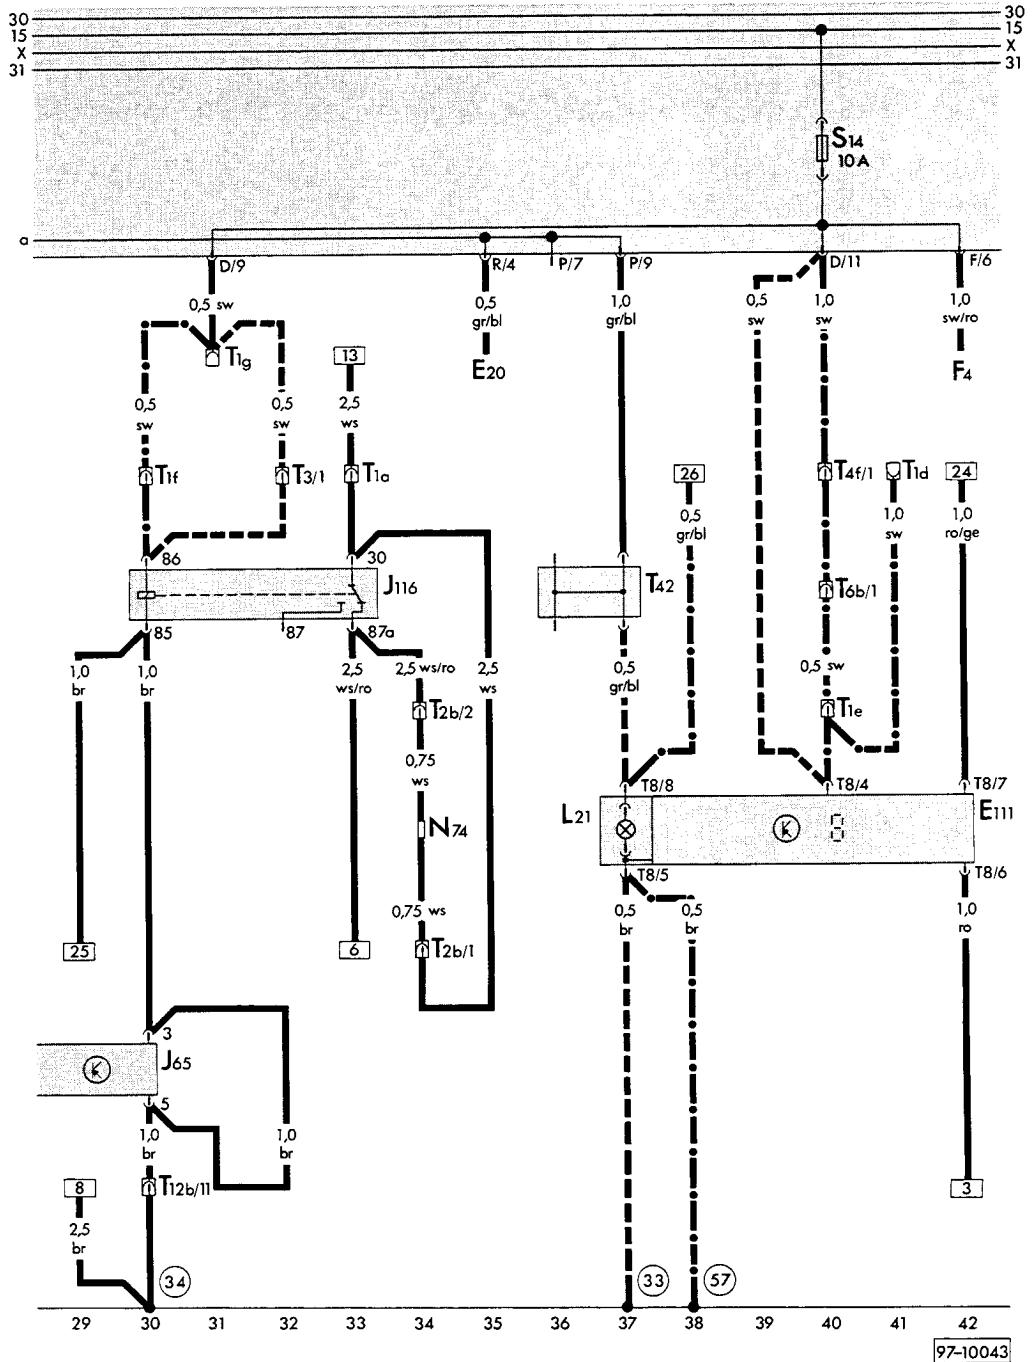

- ws = white
- sw = black
- ro = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = violet
- ge = yellow

- E111 – Programmable Timer, in instrument panel, center
- F4 – Back-Up Light Switch
- J65 – Heater Control Module, below driver's seat\*
- J116 – Resistance Wire Relay, below driver's seat\*
- L21 – Heater Control Lever Light
- N74 – Series Resistance Wiring
- T1a – Single Connector, below driver's seat\*
- T1d – Single Connector, on B-pillar, left
- T1e – Single Connector, on B-pillar, left
- T1f – Single Connector, below driver's seat\*
- T1g – Single Connector, behind fuse/relay panel
- T2b – Double Connector, below driver's seat\*
- T3 – 3-Pin Connector, below driver's seat
- T4f – 4-Pin Connector, behind fuse/relay panel

- T6b – 6-Pin Connector, on left A-pillar, upper part
- T8 – 8-Pin Connector
- T12b – 12-Pin Connector, below driver's seat\*
- T42 – Wire Connector, Terminal 58B
- (33) – Ground connection, behind instrument panel, right
- (34) – Ground connection, below driver's seat\*
- (57) – Ground connection, on left rear B-pillar
- \* – Located behind lower part of left B-pillar trim on vehicles with swivel seat

- – "Camper" only
- – Not on "Camper"