


## Central locking system with remote control,

from December 2000


- Vehicles with right sliding door and tailgate
- Vehicles with right sliding door and swinging doors

Deviate relay location and fuseplacements as well as the locations of multiple connectors see section component locations .

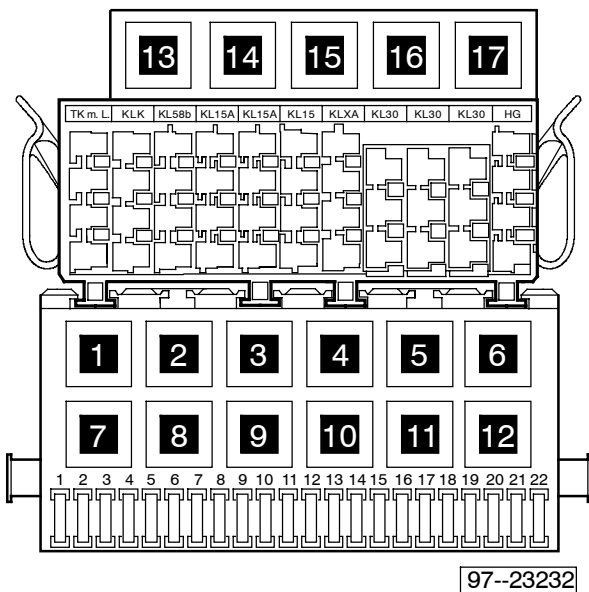

Fuse colors



- 30 A - green
- 25 A - white
- 20 A - yellow
- 15 A - blue
- 10 A - red
- 7,5 A - brown
- 5 A - beige
- 3 A - violet

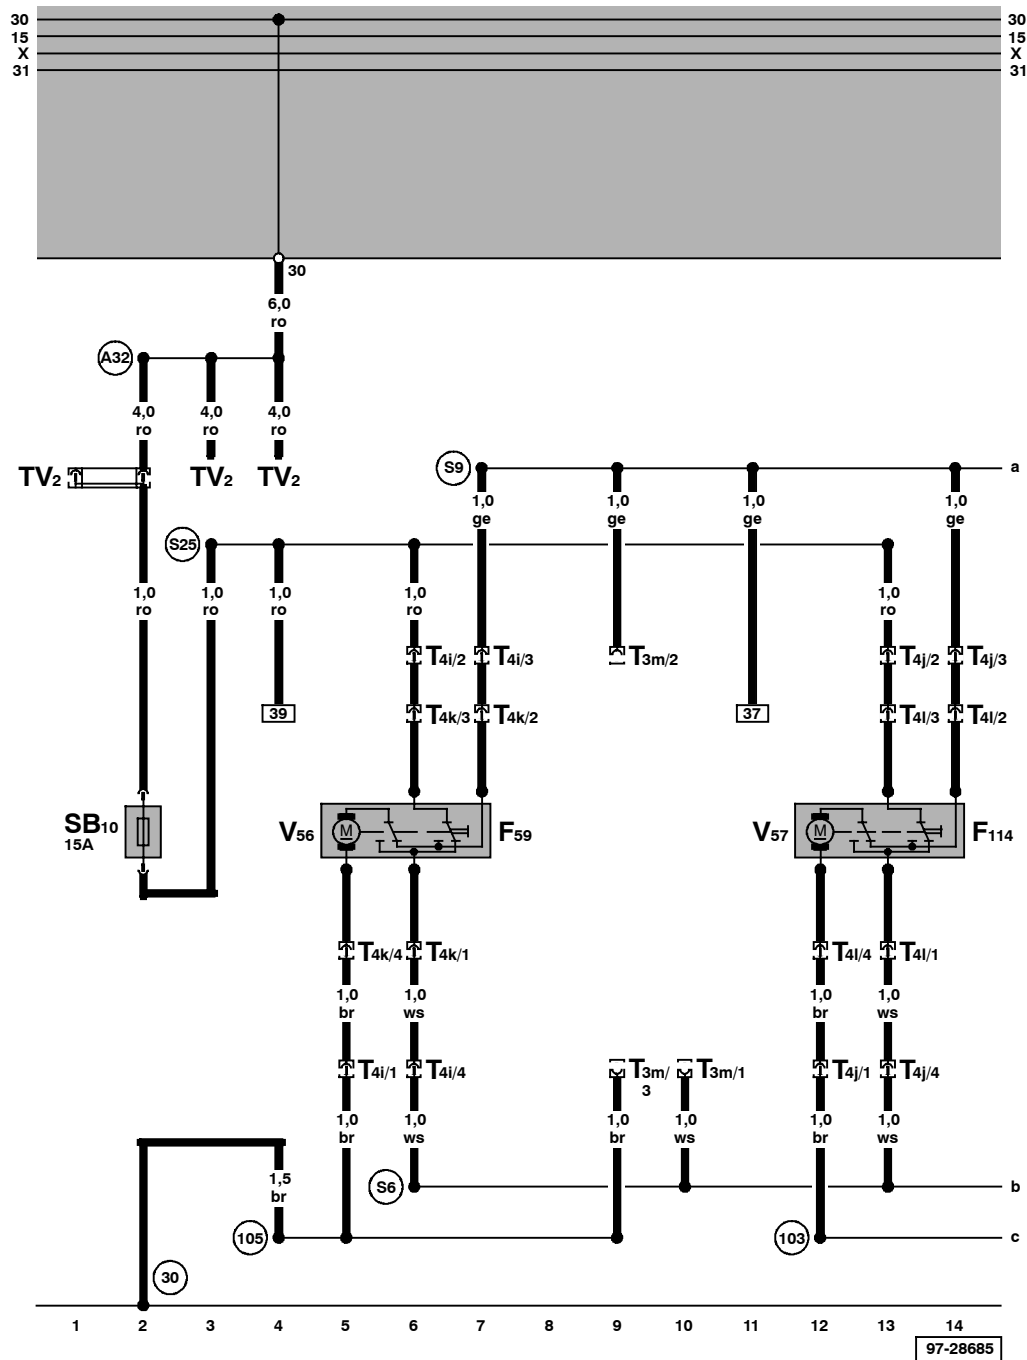

ws = white  
 sw = black  
 ro = red  
 br = brown  
 gn = green  
 bl = blue  
 gr = grey  
 li = lilac  
 ge = yellow  
 or = orange

- F59 - Driver's Door Central Locking System Switch
- F114 - Passenger's Door Central Locking System Switch
- SB10 - Fuse 10 in fuse holder, below relay panel
- T3m - 3-Pin Connector, behind instrument panel, left
- T4i - 4-Pin Connector, behind fuse/relay panel
- T4j - 4-Pin Connector, behind, instrument panel, right
- T4k - 4-Pin Connector, in driver's door
- T4l - 4-Pin Connector, in front passenger's door
- TV2 - Terminal 30 (B+) Wire Connector, red, each 6 points
- V56 - Driver's Door Central Locking System Motor
- V57 - Passenger's Door Central Locking System Motor
- 30 - Ground connection, -1-, beside fuse/relay panel


- 103 - Ground connection -2-, in central locking system wiring harness
- 105 - Ground connection -1-, in central locking system wiring harness
- A32 - Plus connection (30), in instrument panel wiring harness
- S6 - Wire connection (A) -1-, in central locking system wiring harness
- S9 - Wire connection (E) -1-, in central locking system wiring harness
- S25 - Connector (Sensor/Control Module) -1- in wiring harness, central locking

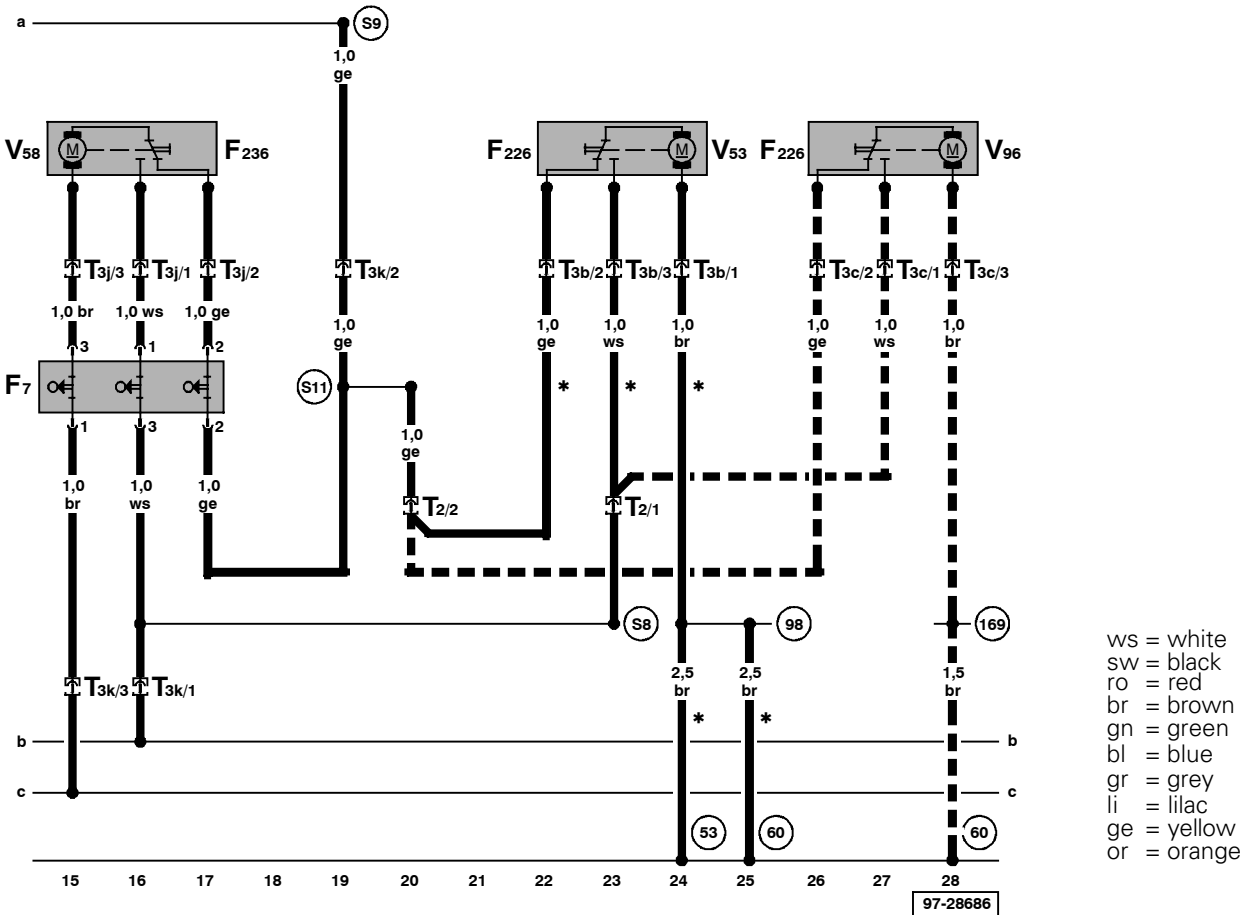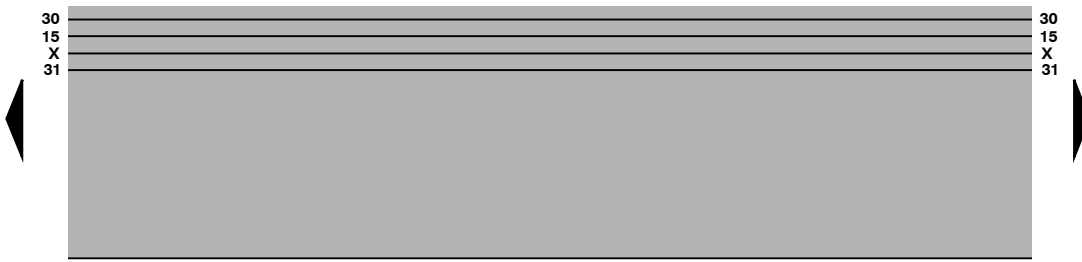

ws = white  
 sw = black  
 ro = red  
 br = brown  
 gn = green  
 bl = blue  
 gr = grey  
 li = lilac  
 ge = yellow  
 or = orange

- F7 - Right Rear Sliding Door Contact Switch
- F226 - Right rear door/swinging door contact switch
- F236 - Door contact switch for central locking (right sliding door)
- T2 - Double Connector, on right D-pillar, upper part
- T3b - 3-Pin Connector, in rear lid
- T3c - 3-Pin Connector, in rear swinging door
- T3j - 3-Pin Connector, in sliding door, right
- T3k - 3-Pin Connector, behind instrument panel, right
- V53 - Decklid Central Locking System Motor
- V58 - Sliding Door Central Locking System Motor
- V96 - Left Rear Door Central Locking System Motor
- 53 - Ground connection, in rear lid, right
- 60 - Ground point -2- near taillamp assembly, right


- 98 - Ground connection, in rear lid wiring harness
- 169 - Ground connection, in right sliding door wiring harness
- S8 - Wire connection (A) -3-, in central locking system/passenger compartment wiring harness
- S9 - Wire connection (E) -1-, in central locking system wiring harness
- S11 - Wire connection (E) -3-, in central locking system passenger compartment wiring harness
- \* - Vehicles with rear lid only
- - Vehicles with rear swinging doors only

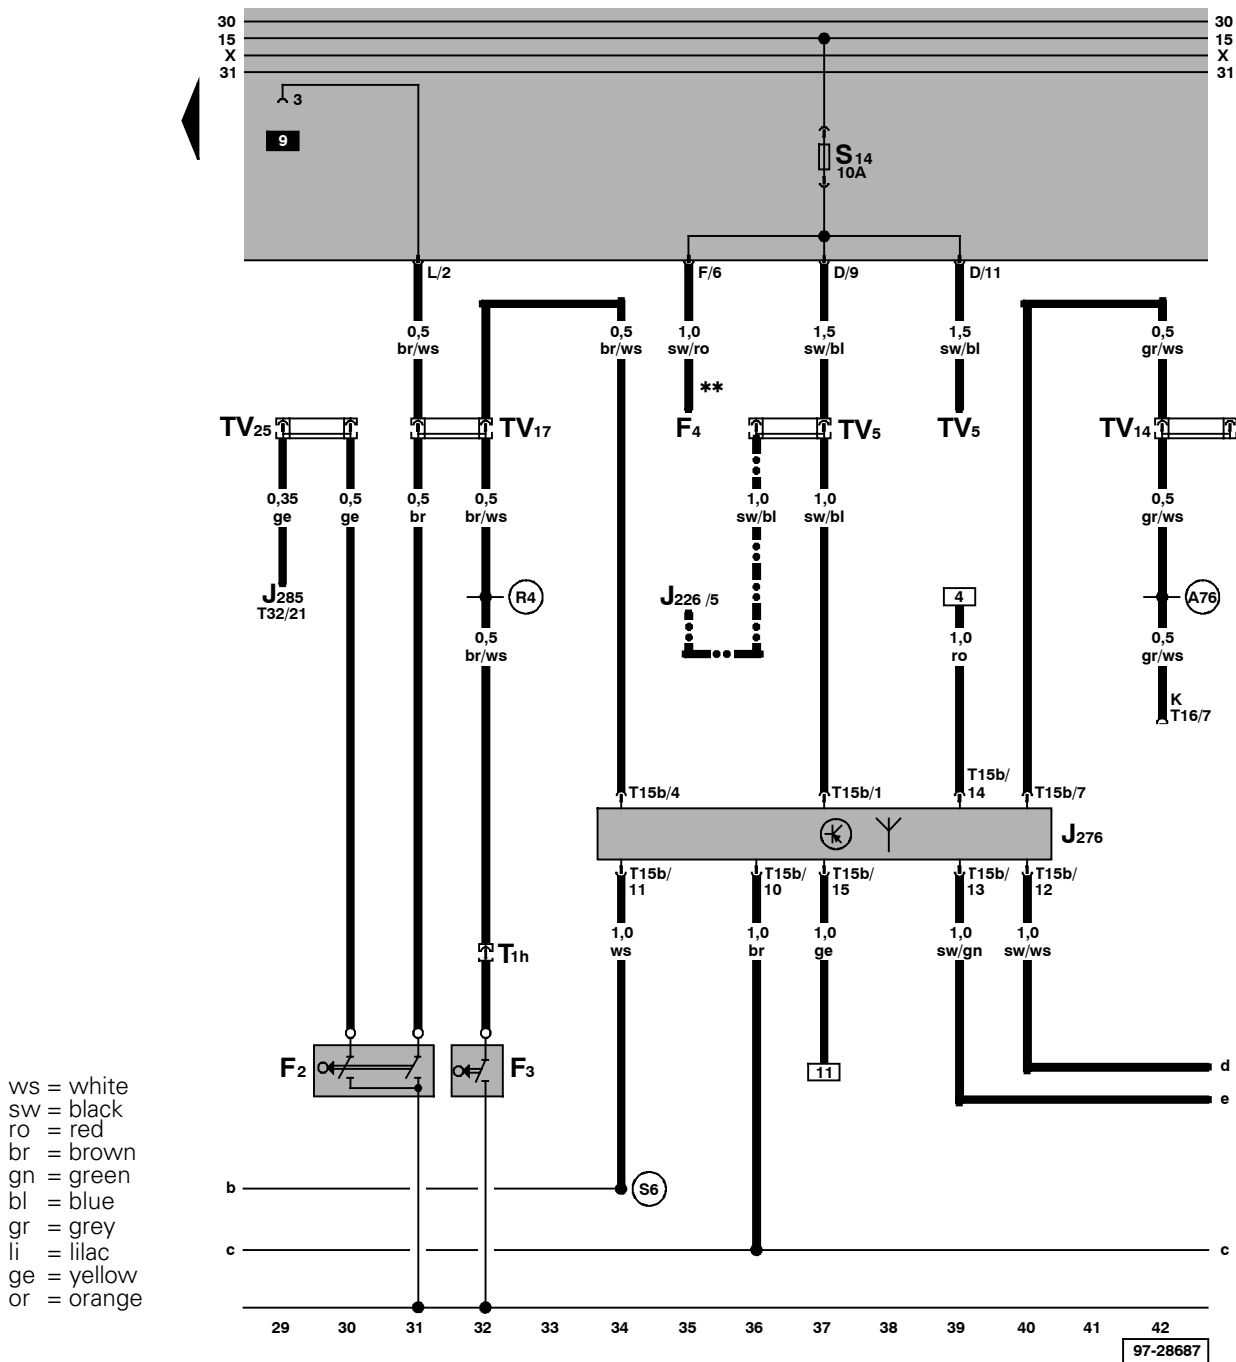

ws = white  
 sw = black  
 ro = red  
 br = brown  
 gn = green  
 bl = blue  
 gr = grey  
 li = lilac  
 ge = yellow  
 or = orange

- F2 - Door contact Switch - Driver's side
- F3 - Door contact Switch-Passenger side
- F4 - Back-Up Light Switch\*\*
- J226 - Park/Neutral Position (PNP) Relay
- J276 - Central Locking System Control Module (Remote Control), behind instrument cluster
- J285 - Control module with indicator unit in instrument panel insert
- T1h - Single Connector, behind instrument panel, right
- T15b - 15-Pin Connector
- T16 - Data Link Connector (DLC), behind steering column cover
- T32 - 32-Pin Connector, blue, on instrument cluster
- TV5 - Terminal 15a Wire Connector, green, 4-Pin and 8-Pin

- TV14 - Data Link Connector (DLC) wire Connector, white
- TV17 - Door Contact Switch Wire Connector, brown
- TV25 - Door Contact Switch Wire Connector, pink
- (A76) - Connector (K-diagnosis wire) in instrument panel wiring harness
- (R4) - Wire connection -1-, in interior light/door contact switch wiring harness
- (S6) - Wire connection (A) -1-, in central locking system wiring harness
- \*\* - Manual transmission only
- .-.- Automatic transmission only

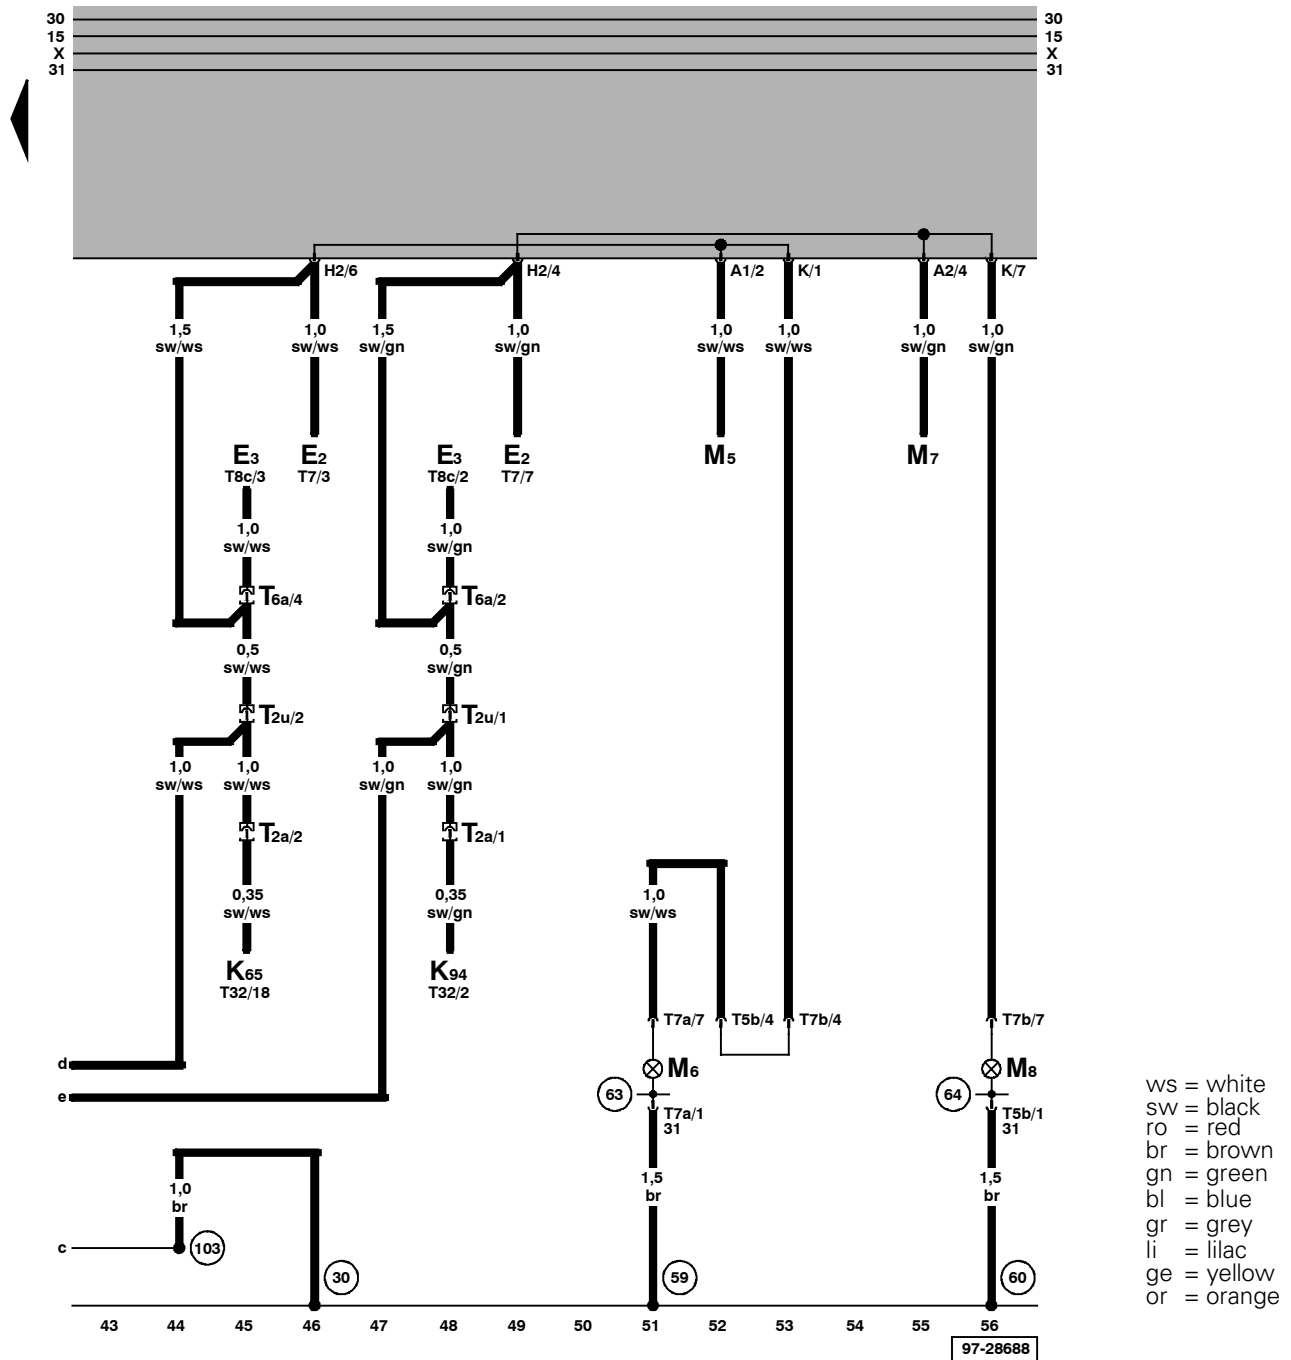

- E2 - Turn signal switch
- E3 - Emergency Flasher Switch
- K65 - Left Turn Signal Indicator Light
- K94 - Right Turn Signal Indicator Light
- M5 - Left Front Turn Signal Light
- M6 - Left Rear Turn Signal Light
- M7 - Right Front Turn Signal Light
- M8 - Right Rear Turn Signal Light
- T2a - Double Connector, behind fuse/relay panel
- T2u - Double Connector, behind fuse/relay panel
- T5b - 5-Pin Connector, on right tail light
- T6a - 6-Pin Connector, behind fuse/relay panel
- T7 - 7-Pin Connector, behind steering column switch cover
- T7a - 7-Pin Connector, on left tail light
- T7b - 7-Pin Connector, on right tail light

- T8c - 8-Pin Connector, on Emergency Flasher Switch
- T32 - 32-Pin Connector, blue, on instrument cluster
- (30) - Ground connection, -1-, beside fuse/relay panel
- (59) - Ground connection, near taillight, left
- (60) - Ground point -2- near taillamp assembly, right
- (63) - Ground connection, on left taillight bulb holder
- (64) - Ground connection, on right taillight bulb holder
- (103) - Ground connection -2-, in central locking system wiring harness